Service

Rexroth Bosch Group

RE 21564/07.10 Replaces: 08.05 1/8

Check valve, pilot operated

Type Z2S

Size 25 Component series 5X Maximum operating pressure 315 bar [4568 psi] Maximum flow 450 l/min [118.9 US gpm]



Table of contents

Contents	Page	 Sandwich plate valve for use in vertical stackings
Features Ordering code Symbols Function, sections, circuit example Technical data Characteristic curves Unit dimensions	1 2 2 3, 4 5 6 7, 8	 Porting pattern according to ISO 4401-08-08-0-05 and NFPA T3.5.1 R2-2002 D08 For the leak-free blocking of one or two actuator ports, optionally Different cracking pressures Pre-opening standard Check valve installation sets separately available Special versions upon request


Features

- Amending documentation:

- "Sandwich plates size 25", data sheet 48056
- "Hydraulic fluids on a mineral oil basis", data sheet 90220


Information on available spare parts: www.boschrexroth.com/spc

Ordering code

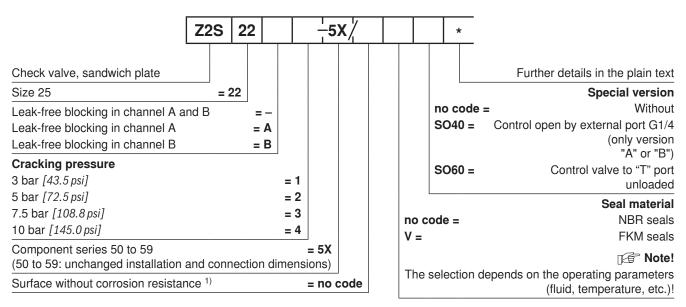

1) Corrosion-resistant surface upon request: e.g. "J50" thick layer passivated (DIN 50979 Fe//Zn8//Cn//T0)

Symbols: Examples (1) = component side, 2) = plate side)

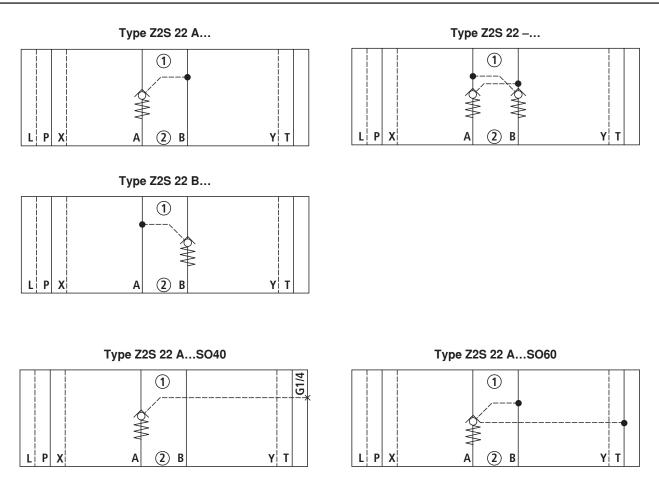

Function, sections, sample circuit

The isolator valve Type Z2S is a releasable check valve in sandwich plate design.

It is used for the leak-free blocking of one or two actuator ports, also in case of longer standstill times.


In the direction A(1) to A(2) or B(1) to B(2), there is a free flow, in the opposite direction, the flow is blocked.


If the valve is, for example, flown through in the direction A(1) to A(2), the control spool (1) is moved in the direction B side, opens the ball seat valve (2) and then pushes the poppet (3) off its seat. Now, hydraulic fluid can flow from B(2) to B(1).

In order to allow for safe closing of the ball seat valve (2), the control spool (1) must be hydraulically unloaded (see circuit example).

Pre-opening

- Due to the two-stage structure with enlarged control open ratio, safe unloading is also possible with lower pilot pressure.
- Avoidance of switching shocks due to dampened decompression of the pressure volume on the actuator side.

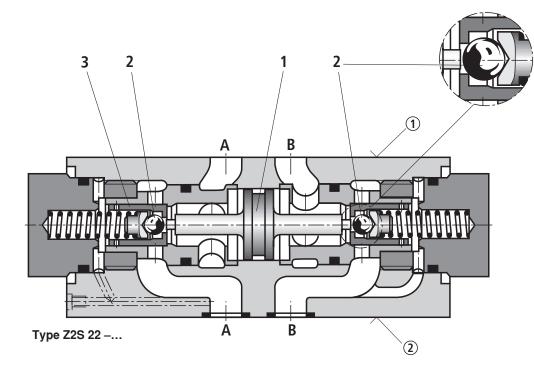


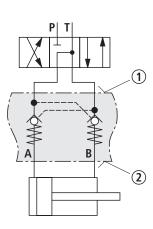


Circuit example, schematic


(1) = component side

- 2 = plate side
- 1 Control spool,
- area A_2
- **2** Ball, area **A**₃
- 3 Poppet, area A₁
- 4 Stop

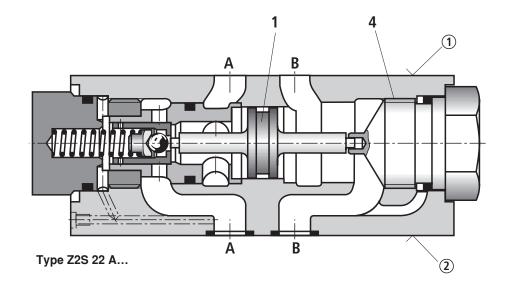

Function, sections

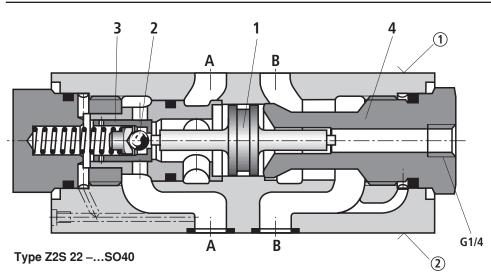

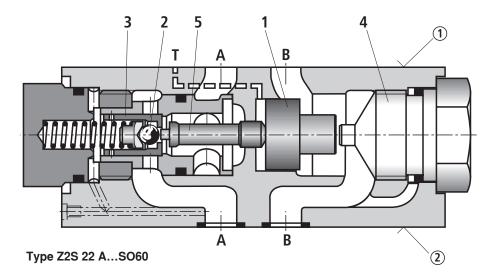

- (1) = component side
- 2 = plate side
- 1 Control spool,
- area \mathbf{A}_2
- **2** Ball, area $\boldsymbol{A}_{\!3}$
- **3** Poppet, area **A**₁
- 4 Stop
- 5 Control spool, area **A**₄

Technical data (For applications outside these parameters, please consult us!)

general		
Weight	kg [lbs]	Approx. 12 [26.5]
Installation position		Any
Ambient temperature range	°C [°F]	-30 to +80 [-22 to +176] (NBR seals) -20 to +80 [-4 to +176] (FKM seals)

hydraulic

5		
Maximum operating pressur	e bar [psi]	315 [4568]
Cracking pressure in free dir	rection	See characteristic curves page 6
Maximum flow	l/min [US gpm]	450 [118.9]
Direction of flow		See symbols page 2
Hydraulic fluid		 On mineral oil basis and related hydrocarbons (HL, HLP, HVLP, HVLPD, etc.) according to DIN 51524
		 Flame-resistant (HFC, HFDU, HFDR) according to ISO 12922¹⁾
		 Environmentally compatible (HETG, HEES, HEPG HEPR) according to ISO 15380¹⁾
		Other hydraulic fluids upon request
Hydraulic fluid temperature range (at the valve working ports)°C [°F]		-30 to +80 [-22 to +176] (NBR seals) -20 to +80 [-4 to +176] (FKM seals)
Viscosity range	mm²/s [SUS]	2.8 to 500 [35 to 2320]
Maximum permitted degree of contamination of the hydraulic fluid - cleanliness class according to ISO 4406 (c)		Class 20/18/15 ²⁾
Area ratio – with pre-	- with pre-opening	$A_3/A_2 \sim 1/12.5$ (see sectional drawing pages 3 and 4)
	– Version "SO60"	$A_1/A_4 \sim 1/9$ (see sectional drawing page 4)

¹⁾ When using flame-resistant or environmentally compatible hydraulic fluids, restrictions with regard to the technical data may be applicable (temperature, pressure range, life time, maintenance intervals, etc.).


IF Note!

Selection of the perfect sealing material (see ordering code page 2) also depends on the hydraulic fluid used.

²⁾ The cleanliness classes specified for the components must be adhered to in hydraulic systems. Effective filtration prevents faults and at the same time increases the service life of the components.

For the selection of the filters see www.boschrexroth.com/filter.


Characteristic curves (measured with HLP46, $\vartheta_{oil} = 40 \degree C \pm 5 \degree C [104 \degree f \pm 9 \degree f]$)

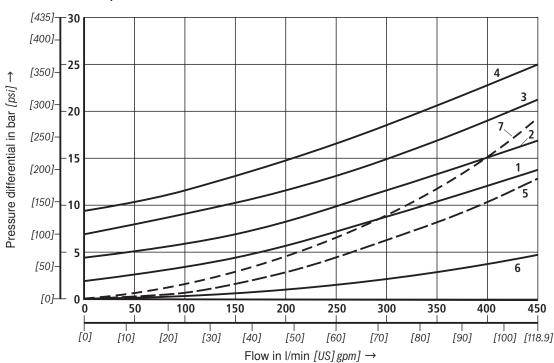


 Δp - q_V characteristic curves

Cracking pressure:


- **1** 3 bar [43.5 psi]
- 2 5 bar [72.5 psi]
- **3** 7.5 bar [108.8 psi]
- 4 10 bar [145.0 psi]
- 5 Free flow (without check valve use), version "A" or "B"
- 6 Only housing
- 7 Check valve controlled open via control spool

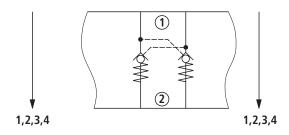

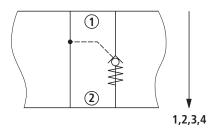

Item explanations and valve mounting screws see page 8.

Unit dimensions (dimensions in mm [inch])

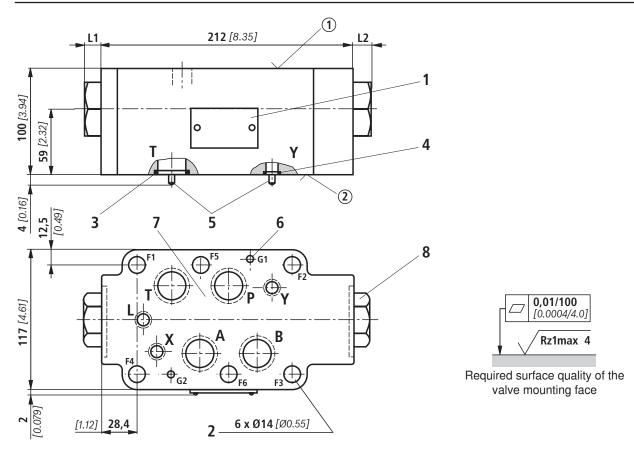

① component side

plate side

Special version Cracking pressure leak-free blocking in L1 in mm [inch] L2 in mm [inch] channel "_" "No code" 1+2 14 [0.55] 14 [0.55] "_" 3 + 444 [1.73] 44 [1.73] 1 + 2 Α, Β 14 [0.55] 14 [0.55] А 44 [1.73] 14 [0.55] 3 + 4 В 14 [0.55] 44 [1.73] "SO40" 1 + 2 Α, Β 14 [0.55] 14 [0.55] А 44 [1.73] 14 [0.55] 3 + 4 В 44 [1.73] 14 [0.55] "SO60" Α, Β 1 + 2 14 [0.55] 14 [0.55] А 44 [1.73] 14 [0.55] 3 + 4 В 44 [1.73] 14 [0.55]

Unit dimensions

- 1 Name plate
- 2 Through hole for valve mounting
- 3 Identical seal rings for ports A, B, P, T
- 4 Identical seal rings for ports X, Y, L
- 5 Locating pins
- 6 Locating holes
- 7 Porting pattern according to ISO 4401-08-08-0-05 and NFPA T3.5.1 R2-2002 D08
- 8 Plug screw SW46, tightening torque $M_A = 70 \text{ Nm} [51.6 \text{ ft-lbs}]$

Valve mounting screws (separate order) 6 hexagon socket head cap screws ISO 4762 - M12 - 10.9

6 hexagon socket head cap screws 1/2"-13 UNC

If Note!

The length of the valve mounting screws of the sandwich plate valve must be selected according to the components mounted under and over the isolator valve.

Depending on the application, screw type and tightening torque must be adjusted to the circumstances.

Please ask Rexroth for screws with the required length.

Bosch Rexroth AG Hydraulics Zum Eisengießer 1 97816 Lohr am Main, Germany Phone +49 (0) 93 52 / 18-0 Fax +49 (0) 93 52 / 18-23 58 documentation@boschrexroth.de www.boschrexroth.de © This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent. The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.